

IMPORTANT SAFEGUARDS



Danger!

- The appliance must not be placed immediately under a fixed power socket.
- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.



Important!

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.


- **ATTENTION:** To avoid the safety system

resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, or connected to a circuit which is turned off and on regularly by the energy supplier.

- Do not use the appliance in small rooms when they are occupied by persons that are not capable of leaving the room, unless constant supervision is provided.



Danger of burns!!

- **WARNING:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature. 



Please note:

- Always use the appliance in an upright position.
- The use of extension leads is not recommended. However if they cannot be avoided, follow the instructions accompanying the extension lead and never exceed the power limit marked on the extension.
- The heater must be positioned at least 50 cm from furniture or other objects.
- Do not use the appliance in rooms with a floor area of less than 4m².
- Before putting the appliance away, make sure it is completely off and unplugged from the mains socket. Do not store in dusty atmospheres.
- Do not rest anything on the appliance.
- Do not use the appliance to dry laundry. Do not obstruct the air intake and outlet grilles (danger of overheating).
- Do not use the appliance near walls, furniture, curtains, etc.

Safety functions

- **Safety device:** the appliance is fitted with a safety device which switches it off in the event of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again.
- **Tip over safety device:** a tip over safety device (F) turns the appliance off if it falls over or is positioned inappropriately in such a way as to jeopardise safety. When the appliance is placed back in a vertical position it starts again automatically.

Disposing of the appliance



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

INTRODUCTION

Thank you for choosing a De'Longhi product.
Please take a few minutes to read these instructions.
This will avoid all risks and damage to the appliance.

Symbols used in these instructions

Important warnings are identified by the symbols below.
It is important to respect the warnings. Failure to respect the warnings could lead to electric shock, serious injury, burns, fire or damage to the appliance.



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.



Important!

Failure to observe the warning could result in injury or damage to the appliance.



Danger of burns!!

Failure to observe the warning could result in burns or scalds.



Please note:

This symbol indicates recommendations and important information for the user.

DESCRIPTION

(see fig. 1)

- A** Mode selector
- B** Thermostat
- C** Swing button (certain models only)
- D** Indicator light
- E** Base
- F** Tip over switch (certain models only)
- G** Filter protection grille
- H** Filter

USE

Installation

The appliance can be used on any horizontal surface.
Do not overload the electrical circuit. Avoid using the same socket for other appliances.

Electrical connection

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EC ON ELECTROMAGNETIC COMPATIBILITY.

Operation and use

1. Make sure the selector (**A**) is in the "0" position before plugging the appliance into the mains socket.
2. Plug into the mains socket.
3. Turn the appliance on by placing the thermostat (**B**) in the

Max position and the mode selector (**A**) in one of the following positions: /1/2/3.

The following modes are available:

- Summer mode (fan only): turn the mode selector to the position (the light comes on).
- Low power operation: turn the mode selector to position "1".
- Medium power operation: turn the mode selector to position "2".
- High power operation: turn the mode selector to position "3".
- To turn the appliance off: turn the mode selector to the "0" position and the thermostat to the position, then unplug from the mains.

Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat (**B**) slowly anticlockwise until you hear a "click". The thermostat will then keep room temperature at the selected level automatically.

Frost prevention mode

With the thermostat dial at minimum and the mode selector (**A**) on "3", the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

Models with motorised rotating base

A number of models have a motorised rotating base.
To distribute the air flow over a larger area, press the swing button (**C**). The appliance swings from right to left.
To stop the appliance in the desired position, simply press the swing button (**C**) again. Models with motorised base are fitted with a tip over switch which turns the appliance off if it falls over (see: "Tip over safety device").

MAINTENANCE

- Always unplug from the mains socket before cleaning.
- During the season when the appliance is in use, clean the air intake and outlet grilles regularly using a vacuum cleaner.
- To clean the filter, remove the rear grille (**G**) by pulling it outwards (fig. 1). Remove the dust filter (**H**) which retains impurities in the air drawn in from the room, blow on it lightly then replace in the appliance.
- Never use abrasive powders or solvents to clean the appliance.

TECHNICAL CHARACTERISTICS

Power supply	See rating plate
Absorbed power	"