

## DESCRIPTION

- A Indicator light
- B Power selector
- C Thermostat

### Electrical connections

- Before plugging the appliance into the mains, make sure the voltage of your mains supply corresponds to the voltage (V) specified on the rating plate and that the socket and power line are adequately dimensioned for the power (W) indicated.
- If you use more than one appliance simultaneously, make sure the mains supply is able to deliver the power required.

### Using in the bathroom

If the appliance is used in a room with a bath or shower, respect the safety distances shown in fig. 1 and always position it away from taps, basins, showers, etc.

## OPERATION AND USE

1. Plug the appliance into the mains.
2. Turn the thermostat lever to maximum.
3. **Summer mode (fan only):** turn the function selector to the  position.
4. **Low power operation:** turn the function selector to position 1 (in models with two fan speeds, the fan operates at minimum).
5. **Medium power operation:** turn the function selector to position 2 (the fan operates at maximum speed).
6. **High power operation:** turn the function selector to position 3 (the fan operates at maximum).

7. **Switching off:** turn the function selector to the "0" position.



**Please note:** In models with two power levels, position 2 corresponds to maximum power.

### Setting the thermostat

Position the lever on the thermostat (C) on maximum "+". When the room has reached the required temperature, slowly move the thermostat lever towards the  position until you hear a click and the fan goes off. The thermostat will then keep room temperature at the selected level automatically.

### Frost prevention mode

With the function selector (B) in position 3 (position 2 in models with two power levels) and the thermostat (C) lever in position , the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

## MAINTENANCE

- Always unplug from the mains socket before cleaning.
- Clean the air intake and outlet grills regularly.
- Never use abrasive powders or solvents to clean the appliance.

## TECHNICAL CHARACTERISTICS

|                |                  |
|----------------|------------------|
| Power supply   | See rating plate |
| Absorbed power | "                |

## TROUBLESHOOTING

| PROBLEM                      | CAUSE  | SOLUTION   |
|------------------------------|--|--|
| The appliance does not work. | Check the appliance is plugged into a mains socket and there is power to the socket. | Plug into the mains socket.  |
|                              | Check for possible obstructions.   | Remove the obstruction, unplug the convective heater from the mains socket and leave to cool down. If the problem continues, contact your local customer services. |
|                              | The power selector is in the "0".  | Turn the power selector to  , 1, 2, 3.  |
|                              | The temperature set on the thermostat is too low.                                    | Turn the thermostat lever anticlockwise to higher values until the appliance comes on again.   |