

INTRODUCTION

Thank you for choosing a De'Longhi product.

Please take a few moments to read the instructions to avoid risks or damage to the appliance.

Symbols used in these instructions

Important warnings are identified by the symbols below.

It is important to respect the warnings.

Failure to respect the warnings could lead to electric shock, serious injury, burns, fire or damage to the appliance.



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.



Important!

Failure to observe the warning could result in injury or damage to the appliance.



Danger of burns!!

Failure to observe the warning could result in burns or scalds.



Please note:

This symbol indicates recommendations and important information for the user.

IMPORTANT WARNINGS

Safety warnings



Danger!

- Do not use this appliance near showers, baths, swimming pools, sinks, etc.
- The appliance must not be placed immediately under a fixed power socket.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be powered through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by the power provider.



Important!

- The appliance is designed and produced for domestic use only.
- This appliance can be used by children

aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- The use of extension leads is not recommended. However if they cannot be avoided, follow the instructions

accompanying the extension lead and never exceed the power limit marked on the extension.

- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- Do not use the appliance in rooms measuring less than 4 m².
- Before putting the appliance away, make sure it is completely off and unplugged from the mains socket. Wrap the cable around the base. Do not store in dusty atmospheres.



Danger of burns!!

- Do not cover the appliance when in operation to avoid the risk of fire.
- Do not use the heater to dry laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50 cm from furniture, walls, curtains, or other objects.
- When the appliance is used in the portable configuration, do not place it near walls, furniture, curtains etc.



Please note:

- Always use the heater in an upright position.
- The heater is fitted with a thermal cutout device which switches the heater off in case of accidental overheating (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again.
- Do not rest anything on the appliance.



IMPORTANT: Never under any circumstances cover the appliance during operation as this would lead to dangerous overheating of the appliance.

Disposing of the appliance



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

USE

Description

- A** Indicator light
- B** Function selector
- C** Thermostat
- D** Timer (only on some models)

Electrical connection

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value in Volts (V) indicated on the appliance and that the socket and power line are appropriate for the load required.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EC ON ELECTROMAGNETIC COMPATIBILITY.

Installation

The appliance may be either portable or wall-mounted (if supplied with a bracket). To mount on the wall, proceed as follows:


- Fix the bracket to the wall respecting the minimum measurements indicated in fig. 2.
- If the appliance is installed in a room with bath or shower, respect the "safety distances" shown in fig. 1 and always install away from taps, basins, showers, etc.
- Attach the appliance to the top hook of the bracket, then rotate gently until it hooks to the bottom tooth of the bracket (fig. 3).
- The appliance must not be placed immediately under a fixed power socket.



Please note: if you do not intend to wall mount the appliance, do not attach the bracket to the unit.

Functioning and use

Models with function selector and thermostat. Make sure the appliance is off before plugging into the mains.

1. Plug the appliance into the mains. The light comes on. If your appliance has a timer, see the section "Models with 24 hour timer". However, to operate the appliance without programming, place the timer selector in the "I" position.
2. Turn the thermostat dial to maximum.
3. **Summer mode (fan only):** turn the function selector to the  position.
4. **Low power operation:** turn the function selector to position 1 (in models with two fan speeds, the fan

operates at minimum).

5. **Medium power operation:** turn the function selector to position 2 (in models with two fan speeds, the fan operates at maximum).
6. **High power operation:** turn the function selector to position 3 (the fan operates at maximum).
7. **Switching off:** turn the function selector to the "0" position.

i Please note: In models with two power levels, position 2 corresponds to maximum power.

Setting the thermostat

Position the thermostat lever on maximum "+". When the room has reached the required temperature, slowly move the thermostat lever towards the "-" position until you hear a click and the fan goes off. The thermostat will then keep room temperature at the selected level automatically.

Frost prevention mode


With the function selector in position 3 and the thermostat dial in position ✱, the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

Models with 24 hour timer

After setting the thermostat (see above), proceed as follows:

THE TIMER IS SET FOR THE FOLLOWING PERIODS OF OPERATION:

FROM 10 TO 12: ON
 FROM 12 TO 18: OFF
 FROM 18 TO 20: ON
 FROM 20 TO 10: OFF

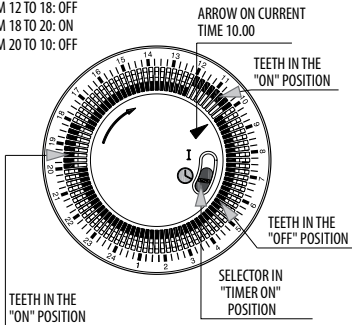

- turn the timer disk clockwise until the arrow on the timer ▲ lines up with the number corresponding to the current time.
- set the times when you want the appliance to operate

by pushing the teeth towards the outside. Each tooth corresponds to 15 minutes.

- place the selector in the ⌚ position. The appliance will now function each day at the times set.

To operate the appliance without the timer programming, place the selector in the "I" position. To go back to timed operation, just move the selector to the ⌚ position.

MAINTENANCE

- Always unplug from the mains socket before cleaning.
- Clean the air intake and outlet grilles regularly.
- Do not use abrasive products or solvents to clean the appliance.