

DESCRIPTION

- A Max + Fan indicator light
- B Thermostat
- C Power selector

General instructions

 
Remove the heater from the packaging. Check that neither the heater nor the power cable has been damaged during transport. Do not operate the heater if damaged. Remove all publicity material present on the appliance.

Electrical connection

- Before connecting the appliance to the current outlet, check that the voltage indicated on the appliance rating plate is the same as your electric plant and that it can stand the power consumption (Watt) indicated by the labelling.
- If more than one appliance is used at once, it is important to ensure that the electric plant is able to support the power required.

Mounting the feet



Turn the appliance upside down on a rug or soft surface in order to prevent damaging the paint finish.

Fix the feet to the appliance with the nr. 4 screws F supplied  (see fig. 1), 2 screws for each foot.

USE

Operation and use

Plug into the mains, turn the thermostat dial (B) to maximum and turn the appliance on by means of the power selector (C) (see description) as described below:

- Turn the power selector knob to the **Min** position to select minimum power.
- Turn the power selector knob to the **Med** position to select medium power (only in some models).
- Turn the power selector knob to the **Max** position to select maximum power.
- Turn the power selector knob to the **Max**  position to select maximum power with the fan (the MAX + FAN indicator light comes on).
- To turn the appliance off completely: turn the power selector to the "0" position and the thermostat to the "" position, then unplug from the mains.


Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat dial (B) slowly anticlockwise until you hear a click and no further.


The thermostat will automatically regulate the temperature set

and keep it constant. In spring or autumn or on mild days, you can save energy by using minimum power.

Frost prevention mode

With the thermostat dial (B) in the  position and one of the power levels selected, the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

Models with ventilation

The appliance has 2 fans for faster more even heating. To start this function, turn the power selector (C) to Max .


MAINTENANCE

Before carrying out any maintenance, unplug the heater from the mains and wait for it to cool off completely. This heater requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrated areas of dirt with a vacuum cleaner.

TECHNICAL CHARACTERISTICS

Supply voltage	See rating label
Absorbed power	"

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	<p data-bbox="318 169 686 220">Be sure it is plugged in and that the electrical outlet is working.</p> <p data-bbox="318 252 510 277">Check for any obstruction.</p> <p data-bbox="318 392 613 418">The power selector is in the "0" position.</p> <p data-bbox="318 477 577 502">The thermostat may be set too low.</p>	<p data-bbox="704 169 852 194">Plug into the outlet.</p> <p data-bbox="704 252 1031 360">Remove the obstruction, unplug the heater and let the appliance cool down. If the appliance doesn't work please contact the nearest service center.</p> <p data-bbox="704 392 1031 446">Turn the power selector to the position MIN, MED, MAX, MAX .</p> <p data-bbox="704 477 1031 531">Turn the thermostat clockwise to a higher setting until the heater restarts.</p>