

DESCRIPTION

- A Warning lamp
- B Thermostat
- C Power selector

General instructions

Remove the appliance from the packaging.

Check that neither the appliance nor the power cable has been damaged during transport. Do not operate the heater if damaged. Remove all publicity material from the appliance.

Electrical connection

- Before connecting the appliance to the power socket, check that the voltage indicated on the appliance rating plate is the same as your electrical system and that it can support the power consumption (Watt) indicated.
- If more than one appliance is used at the same time, it is important to ensure that the electrical system is able to support the power required.

Use on the floor, feet assembly

Tools required:

Screwdriver PH2x100 (crosshead)

2 supplied screws 3.5x13 PH (F)

Place the appliance on a stable surface.

For mounting the feet, proceed as follows:

- Insert the two hooks in the slots and rotate the foot until it is engaged as shown in figure 1.
- Insert the two pins in their respective holes.
- Fix the foot with the screw (F) supplied (figure 2).
- See Figure 3 for the minimum distances of the device from the walls. The measurements are indicated both for models equipped with fan "✂" and for models without.



Important! never use the appliance without feet.

USE

Operation and use

Insert the plug into the socket and switch on at the socket if necessary, turn the thermostat knob (B) to position 6 and turn the appliance on via the power selector (C) as follows:

- The warning lamp (A) lights up.
- Turn the power selector knob to **Min** to select minimum power.
- Turn the power selector knob to **Med** to select medium power.
- Turn the power selector knob to **Max** to select maximum power.

- To switch off the appliance completely: turn the power selector to "0" and the thermostat to ✂, then disconnect at the power socket.

Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat knob (B) slowly anticlockwise until you hear a click and no further. The warning lamp (A) goes out.

The thermostat will automatically maintain the temperature. In spring or autumn or on mild days, you can save energy by using minimum power.

Freezing protection

With the knob of the thermostat (B) in position ✂ and one of the power levels selected, the appliance will maintain the room at a temperature of about 5°C preventing freezing with minimum energy consumption.

Models with fan

The appliance is equipped with a fan that provides even more rapid and uniform heating.

To start this function, turn the power selector (C) to Max ✂.

MAINTENANCE

Before carrying out any maintenance, disconnect the appliance from the power supply and wait for it to cool down completely.

This appliance requires no particular maintenance.


It is sufficient to remove dust with a soft, dry cloth. Never use abrasive powders or solvents.

If necessary remove areas of concentrated dirt with a vacuum cleaner.

TECHNICAL CHARACTERISTICS

Power supply	See appliance rating plate
Power consumption	"

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	<p>The plug is not inserted properly into the power socket or the socket switch is off.</p> <p>Check for any obstruction.</p> <p>The power selector is in the "0" position.</p> <p>The thermostat is set too low.</p>	<p>Insert the plug into the power socket and switch on if necessary.</p> <p>Remove the obstruction, disconnect the power plug of the heater and let the appliance cool down. If the problem persists, contact your nearest service centre.</p> <p>Move the power selector to position MIN, MED, MAX or MAX .</p> <p>Turn the thermostat knob clockwise to higher settings until the heater restarts.</p>