

DESCRIPTION

- A** Light + Max ✖
- B** Thermostat
- C** Power selector
- D** Slide switch
- E** Timer
- F** Timer pointer

General instructions

Remove the appliance from the packaging. Make sure the appliance and power cord have not been damaged during transport. Do not turn the appliance on if damaged. Remove all promotional material from the appliance.

Electrical connections

- Before plugging the appliance into the mains, make sure the voltage of your mains supply corresponds to the voltage (V) specified on the rating plate and that the socket and power line are adequately dimensioned for the power (W) indicated.
- If you use more than one appliance simultaneously, make sure the mains supply is able to deliver the power required.

Free standing, attaching the feet

Tools required:

PH2x100 screwdriver (cross-tip)

2 3.5x13 PH screws provided (G)

Position the appliance on a stable surface.

To mount the feet, proceed as follows:

- Insert the two hooks in the slits and rotate the foot until it locks in place as shown in figure 1.
- Insert the two pins in the corresponding holes.
- Attach the foot with the screw (G) provided (figure 2).
- See figure 3 for the minimum distances of the appliance from the walls.



Important! never use the appliance without the feet.

USE

Operation and use

Insert the plug into the socket and switch on at the socket if necessary, turn the thermostat knob (B) to position 6 and turn the appliance on via the power selector (C) as follows:

- The warning lamp (A) lights up.
- Turn the power selector knob to **Min** to select minimum power.
- Turn the power selector knob to **Med** to select medium power.
- Turn the power selector knob to **Max** to select maximum

power.

- Turn the power selector dial to the **Max** ✖ position to select high power with fan.
- To switch off the appliance completely: turn the power selector to "0" and the thermostat to ✖, then disconnect at the power socket.

Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat dial (B) anticlockwise until you hear a click and no further.

The thermostat will regulate the temperature automatically, keeping it constant. In spring, autumn or on milder days, you can save energy by using low power.

Freeze prevention

With the thermostat dial (B) in the ✖ position and one of the power levels selected, the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

Fan

The appliance has a fan for faster and more even heating. To start this function, turn the power selector (C) to Max ✖ (when the thermostat is activated, the light A comes on).

Models with 24-hour timer

When the appliance is connected to the power supply the timer is always active so as to stay synchronized with the local time. To operate the appliance without timer, position the timer slider (D) to OFF.

To operate the appliance at the times set, position the timer slider to ON and proceed as follows:

- Check the time on your clock or watch. If it is 10.00 for example, turn the numbered programmer disk until the number 10 coincides with the pointer (F) marked on the programmer device.
- Set the periods of time during which you want the appliance to operate by pushing the teeth outwards. Each tooth corresponds to a period of 30 min. At the end of the procedure, the sectors corresponding to the periods of operation will be visible.
- In this way, the appliance will function automatically each day at the times set. (Important: the appliance must always be connected to the power supply).
- To modify the settings, push the teeth back to the original position (teeth inwards) and programme the new operating times.
- To turn the appliance off, turn the power selector to "0".

MAINTENANCE

Before carrying out any maintenance, disconnect the appliance from the power supply and wait for it to cool down completely.

This appliance requires no particular maintenance.

It is sufficient to remove dust with a soft, dry cloth. Never use abrasive powders or solvents.


If necessary remove areas of concentrated dirt with a vacuum cleaner.

TECHNICAL CHARACTERISTICS

Power supply See appliance rating plate

Power consumption "

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	The plug is not inserted properly into the power socket or the socket switch is off.	Insert the plug into the power socket and switch on if necessary.
	Check for any obstruction.	Remove the obstruction, disconnect the power plug of the heater and let the appliance cool down. If the problem persists, contact your nearest service centre.
	The power selector is in the "0" position.	Move the power selector to position MIN, MED, MAX or MAX  .
	The thermostat is set too low.	Turn the thermostat knob clockwise to higher settings until the heater restarts.
Timer setting.	Make sure the timer is correctly set to local time and check the position of the teeth.	