

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/pr injury to persons including the following:

1. Read all instructions carefully before using the coffee-mill.
2. To protect against risk of fire, electrical shock and injury to persons, do not immerse cord, plug or appliance in water or other liquids.
3. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not remove the lid until the blade has stopped completely. After releasing the push button the blade will come to a stop within 2 to 3 seconds.
6. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning. Allow to cool down before putting on or taking off parts, before cleaning the appliance, and before storing.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return the appliance to the nearest authorized De'Longhi service center for examination, repair or adjustment.
8. To reduce the risk of injury do not drape cord over the counter top or table top where it can be pulled on by children or tripped over unintentionally.
9. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces. A short power cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer, detachable power supply cords or extension cords are available and may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter-top or table top where it can be pulled on by children or tripped over.
10. Do not use outdoors.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect, remove plug from wall outlet. Do not yank cord, instead grasp plug and pull to disconnect.
13. Do not use the appliance for other than intended use. Never chop ice or use the coffee mill other than as described in the instructions.
14. Check grinding chamber for presence of foreign objects before using.
15. Blades are sharp. Handle them carefully.
16. Make certain the voltage of the appliance is in accordance with your domestic supply.
17. This appliance is for household use only. Any servicing other than cleaning and user maintenance should be performed by the nearest authorized De'Longhi Service Center.  
Do not immerse the appliance in water.  
To reduce the risk of fire or electric shock, do not dismantle the appliance. Repair should be done by an authorized De'Longhi Service Center only.
18. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
19. Avoid contacting moving parts.
20. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

# SAVE THESE INSTRUCTIONS

## DESCRIPTION OF THE APPLIANCE

- A. Cleaning brush
- B. Coffee bean container's cover
- C. Coffee bean container
- D. Cable winder
- E. Cups number selection ring (KG49 only)
- F. Indicator for degree of grinding (KG49 only)

## PRELIMINARY CHECKS

### Controls after transport

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present.

Do not use the appliance if it is visibly damaged. Contact the technical service center.

### Connecting the appliance



**Important!** Check that the power supply voltage corresponds to the value indicated on the rating plate on the bottom of the appliance.

## USING THE APPLIANCE

- Place the appliance on a flat surface.
- Unscrew the lid in a counter-clockwise direction and lift it off (fig. 1).
- Fill the container with the desired amount of coffee beans (fig. 2).
- Screw the lid in a clockwise direction, rotating it until it can't be turned anymore (fig. 3). A safety device will not allow operation if the lid is not inserted correctly.  
Do not attempt operation **without the cover** being in place.
- Pull out the length of cord required and plug into the socket (fig. 4).
- In select models (KG49), turn the cups number selection ring (E) to the number of cups you wish to grind (fig. 5). The amount of coffee will change depending on individual taste, the type and roasting of the coffee beans and the degree of grinding selected: never fill over the **MAX** level stamped on the coffee bean container.
- Press the cover to start the coffee mill (fig. 6) and keep it pressed until the right grinding

level is obtained.

Do not operate this appliance continuously for more than 60 seconds. Allow appliance to cool down for 10 minutes before using again.

- In models with indicator lights showing the degree of grinding (**F**) (coarse, medium, fine), press the cover and then release it when the indicator lights up relative to the required degree of grinding. Remember that when the cover is released, even for a second, the appliance resets and starts grinding again as if there were whole beans inside.

## TIPS

- Always keep the lid of the coffee bean container tightly closed to keep in all the flavor and aroma of the coffee beans.
- Only grind the amount of coffee required.
- Do not overfill the coffee bean container.  
As an indication, calculate a tablespoon of coffee beans per cup (e.g. 4 spoonfuls of coffee beans for 4 cups of coffee). The ideal amount depends on individual taste and will be discovered through the use of the machine.
- For models with indicators lights showing the degree of grinding, remember that: **COARSE** grinding is ideal for percolators; **MEDIUM** is ideal for mocha coffeepots and drip coffee makers; **FINE** is ideal for espresso coffee makers.
- To ensure that you always have the best quality in terms of freshness, always clean the appliance after each use, especially if coffee is ground after grinding other products (e.g. spices). However it is inadvisable to grind oily beans (e.g. peanuts) or products that are too hard (e.g. rice).

# CLEANING

---



***Danger of electric shock!*** Before performing any cleaning operations, the machine must be turned off and disconnected from the power outlet. Never immerse the appliance in water.

- Unplug from the outlet.
- Wash the cover with water and mild soap. Then thoroughly rinse and dry.
- To clean easily, remove the coffee bean container completely by turning it and unscrewing it clockwise until it is released, then lift it off (fig. 7).
- Remove the coffee grounds residues with the provided brush (fig. 8). Never immerse the coffee bean container in water to avoid damages.
- To replace the coffee bean container, rotate counterclockwise until it locks in position.
- Clean the outside of the appliance with a soft cloth.
- When you store after use of the appliance, wind the cable on the cable winder (**D**).

This warranty applies to all products with De'Longhi or Kenwood brand names.

## LIMITED WARRANTY

---

### **What does the warranty cover?**

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company's expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current ( AC ) circuit.

### **How long does the coverage last?**

This warranty runs for one year ( 1 ) from the purchase date found on your receipt and applies only to the original purchaser for use.

### **What is not covered by the warranty?**

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

### **How do you get service?**

If repairs become necessary, see contact information below:

U.S. Residents: Please contact our toll free hotline at 1-800-322-3848 or log onto our website at [www.delonghiusa.com](http://www.delonghiusa.com). For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at [www.delonghi.com](http://www.delonghi.com).

Residents of Mexico: Please refer to the Limited Warranty statement for Mexico.

Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

### **How does state law apply?**

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.