

DESCRIPTION

- A Indicator light
- B Thermostat
- C Power selector
- D Timer
- E Timer pointer
- F Slide switch (certain models only)
- G Wheels

USE

Wheels

Turn the radiator upside down and rest it on a piece of cloth or other soft surface to avoid damaging the paint. Open the wheels completely by rotating them outwards (Fig. 1). Turn the radiator upright.

Important

When in use, the radiator should always be kept vertical (wheels at the bottom, controls at the top). Any other position could be dangerous!

Electrical connection

- Before plugging the appliance into the mains socket, check that the mains power supply corresponds to the value indicated on the rating plate and that the mains power supply is adequate for the load.

PLUG THE RADIATOR INTO AN EARTHED SOCKET ONLY.

The radiator must be connected to a perfectly functioning 230-240V socket with correct poles. Avoid contact between clothing, household linen, furniture, inflammable material and the socket providing power to the radiator.


Where to locate the appliance

Position the radiator under the coldest window in the room or wherever else you want.

The radiator will reduce the effects of cold draughts to a minimum. The appliance must not be positioned directly underneath a fixed power point. Do not use the appliance in rooms with a surface area of less than 4 m².

OPERATION AND USE

Plug into the mains, turn the thermostat pointer as far as it will go to maximum and turn the radiator on using the power selector as described below:

- Turn the power selector dial (C) to the  position to retain the time set only.
- Turn the power selector to 1 (minimum power) (the light comes on).

- Turn the power selector to 2 (medium power) (the light comes on).
- Turn the power selector to 3 (maximum power) (the light comes on).




Please note: For economical operation, once the appliance has reached working temperature, you can use minimum or medium power (1 or 2).

Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat slowly clockwise until a "click" is heard and no further. The thermostat will then keep room temperature at the selected level automatically. If your model has three power levels, in the spring or autumn or on mild days, you can further save energy by using minimum power.


Frost prevention mode

With the thermostat in the  position and the power selector set to high power, the appliance maintains the room at a temperature of about 5°C, preventing freezing with minimum energy consumption.



Please note: To turn the appliance off completely, turn the power selector to "0".

24-HOUR TIMER

As with all clocks, the timer must be set to the exact time. For example, if it is 9.30 in the morning, turn the dial of the timer clockwise (in the direction of the arrow) until 9.30 is lined up with the indicator. .



IMPORTANT: DO NOT TURN THE DIAL OF THE TIMER ANTICLOCKWISE.

The timer is an electric clock and works only if plugged into a socket.


The timer has 96 teeth, each tooth corresponds to 15 minutes. The appliance can be programmed to come on and go off at set times. With the timer, the appliance is programmed to within 15 minute intervals and you can programme up to 48 cycles (each cycle consists of a coming on and a going off time) during a 24 hour period. The teeth can be pushed or pulled with your fingers. When a tooth is pushed towards the centre of the dial, the radiator remains in operation for those 15 minutes. If the tooth is pulled out, the radiator is off during that period.

Using the timer


- A) Plug the appliance into the mains socket.


- B) Turn the dial clockwise to set the current time.
- C) Push the teeth corresponding to the period you do not want the radiator to operate outwards.
- D) Turn the power selector to the required position (1, 2, 3 or )
- E) Once the teeth have been set for the desired periods of heating, the radiator will come on and go off as set.
- F) To turn the appliance off, turn the power selector (C) to "0". In this position, the time will not be retained. If on the other hand you want to retain the time set, turn the power selector (C) to the  position.

TIMER WITHOUT SLIDE SWITCH


Power selector (C)	Operation
0	<ul style="list-style-type: none"> • Appliance off. • The time set is not retained.
	<ul style="list-style-type: none"> • Appliance off. • The time set is retained.
1	<ul style="list-style-type: none"> • Programming active. • The appliance operates at low power. • The set time is retained.
2	<ul style="list-style-type: none"> • Programming active. • The appliance operates at medium power. • The set time is retained.
3	<ul style="list-style-type: none"> • Programming active. • The appliance operates at high power. • The set time is retained.

EXCLUDING THE TIMER (models with slide switch only)


To exclude the timer settings, position the slide switch (F) on I. To go back to programmed operation, position the slide switch (F) on .

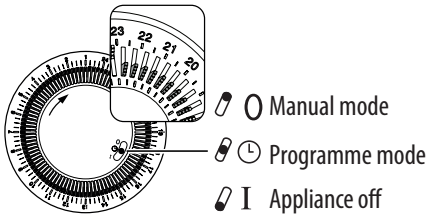


TIMER WITH SLIDE SWITCH IN POSITION 0

Slide switch (F)	Power selector (C)	Operation
0	0	<ul style="list-style-type: none"> • Appliance off. • The time set is not retained.
		<ul style="list-style-type: none"> • Appliance off. • The set time is retained.
	1	<ul style="list-style-type: none"> • Programming not active. • The appliance does not operate at low power. • The set time is retained.
	2	<ul style="list-style-type: none"> • Programming not active. • The appliance does not operate at medium power. • The time set is retained.
	3	<ul style="list-style-type: none"> • Programming not active. • The appliance does not operate at high power. • The set time is retained.

TIMER WITH SLIDE SWITCH IN POSITION I

Slide switch (F)	Power selector (C)	Operation
I	0	<ul style="list-style-type: none"> • Appliance off. • The time set is not retained.
		<ul style="list-style-type: none"> • Appliance off. • The set time is retained.
	1	<ul style="list-style-type: none"> • Programming not active. • The appliance operates continuously at low power. • The set time is retained.
	2	<ul style="list-style-type: none"> • Programming not active. • The appliance operates continuously at medium power. • The time set is retained.
	3	<ul style="list-style-type: none"> • Programming not active. • The appliance operates continuously at high power. • The set time is retained.

TIMER WITH SLIDE SWITCH IN POSITION ⌚

Slide switch (F)	Power selector (C)	Operation
⌚	0	<ul style="list-style-type: none"> Appliance off. The time set is not retained.
		<ul style="list-style-type: none"> Appliance off. The set time is retained.
	1	<ul style="list-style-type: none"> Programming active. The appliance operates at low power. The set time is retained.
	2	<ul style="list-style-type: none"> Programming active. The appliance operates at medium power. The time set is retained.
	3	<ul style="list-style-type: none"> Programming active. The appliance operates at high power. The set time is retained.

doubt, do not try and repair on your own. There would be the danger of fire or electric shock. Call your nearest customer services (see list of customer service centres).

TECHNICAL DATA

Power supply voltage

See rating plate

Absorbed power

“

Safety device

A safety device shuts the radiator down in the case of overheating. To start the radiator up again, call the nearest customer services.

MAINTENANCE AND CUSTOMER SERVICES

Before performing any operations on the appliance, always unplug from the mains socket and leave to cool. Dust the radiator with a soft damp cloth without using detergents or abrasives. If the radiator is not used for a long period of time, wrap the cable around the cable tidy and store the appliance in a dry place. This appliance has been made to last many years without problems. In the event of malfunction or

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not work	Make sure the appliance is plugged into a mains socket and there is power to the socket.	Plug into a mains socket.
	Check for possible obstructions.	Remove the obstruction and wait until the appliance has cooled down. If the appliance still does not function, contact your local De'Longhi Customer Services.
	The set temperatures may be too low.	Set a higher temperature.